


Installation Guide




Slope Installation Detail

1. Dig a 15 cm x 15 cm trench both up-slope, down-slope and along the top side of the channel. Prepare the slope soil surface (raking, seeding and fertilizing).
2. Begin by placing the center blanket a minimum of 30 cm down-slope of the up-slope trench. Secure the blanket at the bottom of the trench with staples placed 30 cm apart. Backfill and compact the trench. Apply seed and fold the blanket over soil, secure with a row of staples placed 30 cm apart across the width of the blanket (Letter A).
3. Roll the blanket vertically down the slope. Secure using the appropriate staple pattern below, specified by slope. 4. Parallel blankets must be overlapped by a minimum of 10 cm and secured with a row of staples placed approximately 30 cm apart (Letter B).
5. The direction of water flow. Connect the blankets by placing staples approximately 30 cm apart across the width of the blankets.
6. The end of blanket must be secured in a 15 cm x 15 cm trench with a row of staples placed at 30 cm intervals (Letter E).

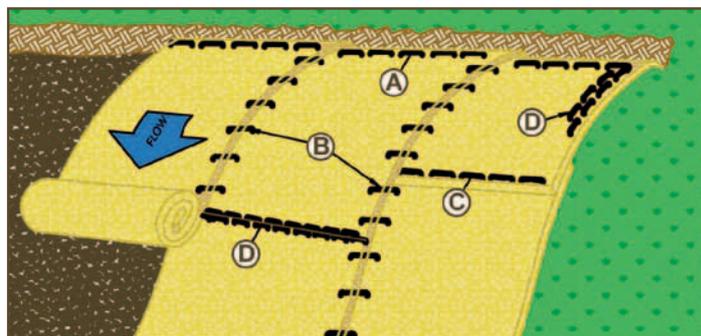


Staple Patterns:

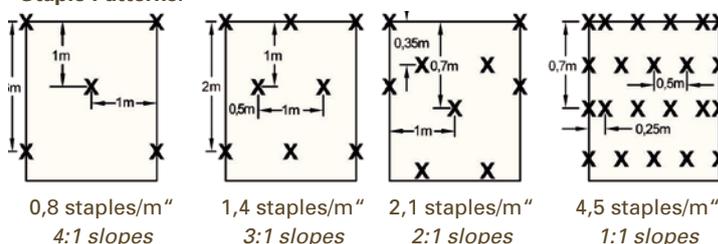


Channel Installation Detail

1. Dig a 15 cm x 15 cm trench both up-slope and down-slope of the area the matting is to be applied. Prepare the slope soil surface (raking, seeding and fertilizing).
2. Begin by placing the blanket a minimum of 30 cm down-slope of the up-slope trench. Secure the blanket at the bottom of the trench with staples placed 30 cm apart. Backfill and compact the trench. Apply seed and fold the blanket over soil, secure with a row of staples placed 30 cm apart across the width of the blanket (Letter A).
3. Roll the blanket vertically down the slope. Secure using the appropriate staple pattern below, specified by the slope.
4. Continue placing blankets up the slopes on both sides with a minimum 10 cm overlapping (Letter B), and securing each blanket in the beginning trench (Letter A).
5. Additional horizontal blankets can be joined using a minimum 10 cm overlapping or shingle style in the direction of water flow. Connect the blankets by placing staples approximately 15 cm apart across the width of the blankets (Letter C).
6. The end of the blanket must be secured in a 15 cm x 15 cm trench by a row of staples placed at 30 cm intervals (Letter E).
7. At the top edge of the side slope, fasten the blanket in a 15 cm x 15 cm trench placed at 30 cm intervals. Install an additional row of staples 15 cm down slope of the trench along the width of the fabric (Letter F).

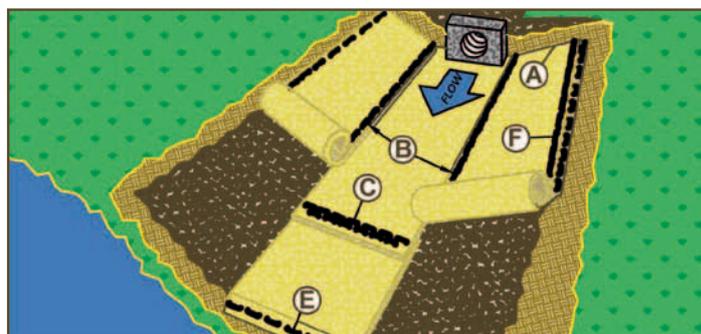

Staple Patterns:

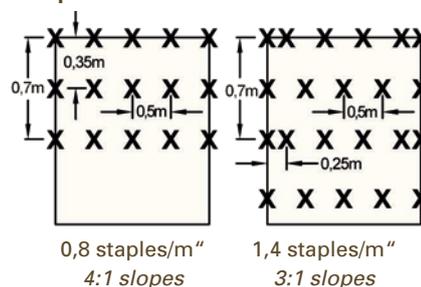

Down-slope Trench Installation Detail (Letter E)



Up-slope Trench Installation Detail (Letter A)

